


Firestick Remote Instructions / Remote Basics

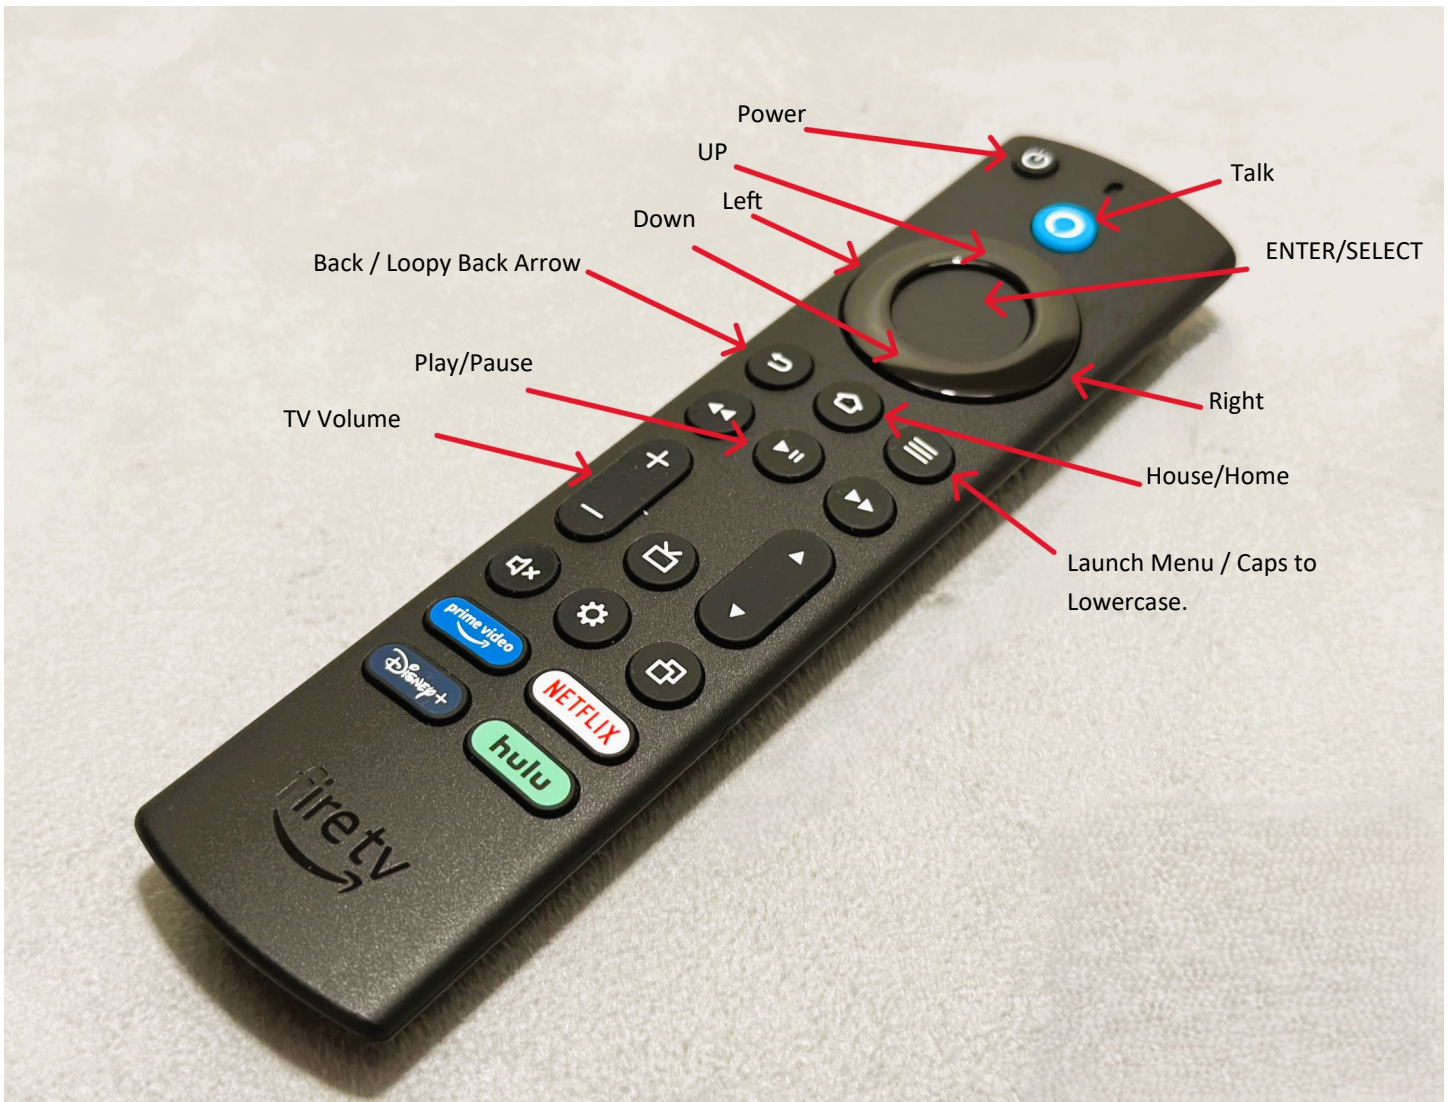

TV Power - If setup properly this will turn on your TV, Sound Bar, Receiver, or any other device you set to it.

Talk - This is the way you will talk to your TV for Searches, Alexa, and more.

Enter - This is your Select button. Also to get to menus inside Tivimate hold this button down

Back/Loopy Back Arrow - This button is used when watching a movie, show, or live tv and you want to exit out to get to the menu. If you are watching a show (on demand such as Netflix, Hulu, etc.) or a movie use this button to mark your place.

House/Home - This will bring you back to the main page on your firestick. Use this when you don't know where you are or you think your firestick is locked up or frozen.

Menu / Caps to Lowercase - This is mainly used when you are looking for a menu. This is also used when using keyboard to change from lowercase / to capital letters.

Play / Pause - PLEASE do not pause TV, Shows, or Movies in tivimate as it will store unnecessary data on your firestick and cause sluggishness. However use this to test internet speed.

Firestick Remote Instructions / Tivimate Basics

Mic button

Use for talking to Tivimate to find: Channels, shows, movies, sport events, and more.

Back / Loopy Back Arrow:

When you are watching any show, movie, TV program use this button to exit to Menu or in the case of movies or shows this will mark where you left off.

If your in the menu, HOLDING this button down will return you to active show.

Enter/ Select:

This is to enter channels, movies, and shows with a basic tap.

When you Long press this within Tivimate it will always pop up a menu.

Home / House button

When you want to exit Tivimate, Lost, or doesn't seem like your firestick is responding.

Basic Firestick instructions / Tivimate



THE ONLY APPS YOU NEED FOR:

- ◆ LIVE TV
- ◆ MOVIES
- ◆ SHOWS (NETFLIXS, HULU, DISNEY+, HBO/MAX, AMAZON, DISCOVERY+, AND MORE!!)

